


Corner Applications

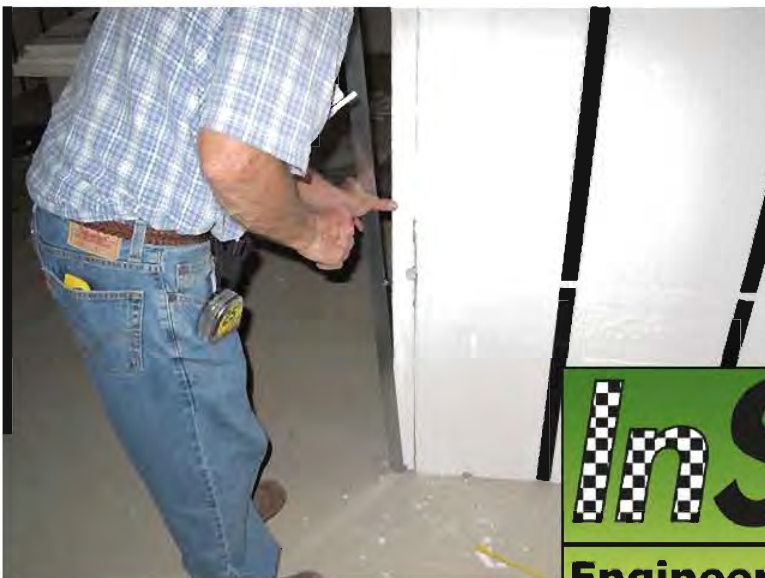



InSoFast
Engineered Insulation Panels




InSoFast
Engineered Insulation Panels





InSoFast
Engineered Insulation Panels

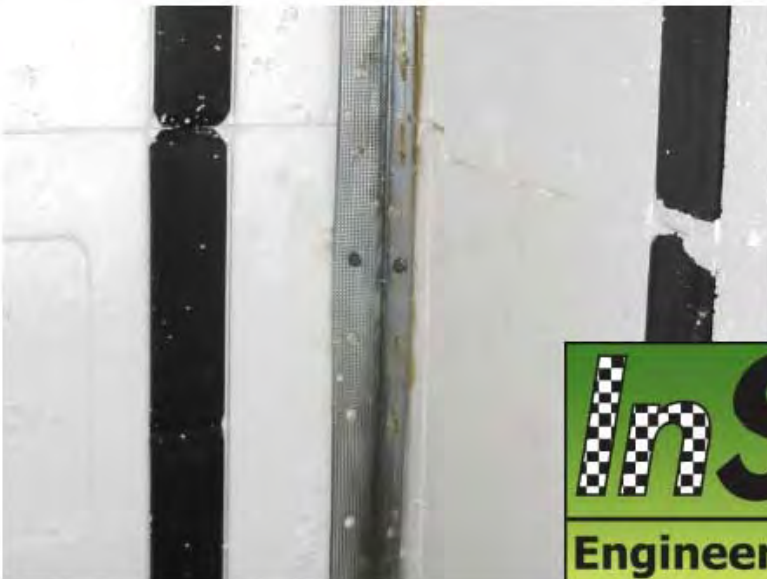

InSoFast
Engineered Insulation Panels




InSoFast
Engineered Insulation Panels

ISF 09.01 INSOFAST - CORNER BEAD DETAIL FOR DRYWALL

INSTALL INSOFAST PANELS IN A RUNNING BOND. AT CORNER, ADD 2" TO THE CUT LENGTH. USE CUT OFF PIECE TO CONTINUE AROUND THE CORNER.

INSTALL 2" METAL CORNER TRIM WITH FOAM COMPATIBLE ADHESIVE. ALLOW TO DRY 24 HOURS BEFORE INSTALLING DRYWALL.

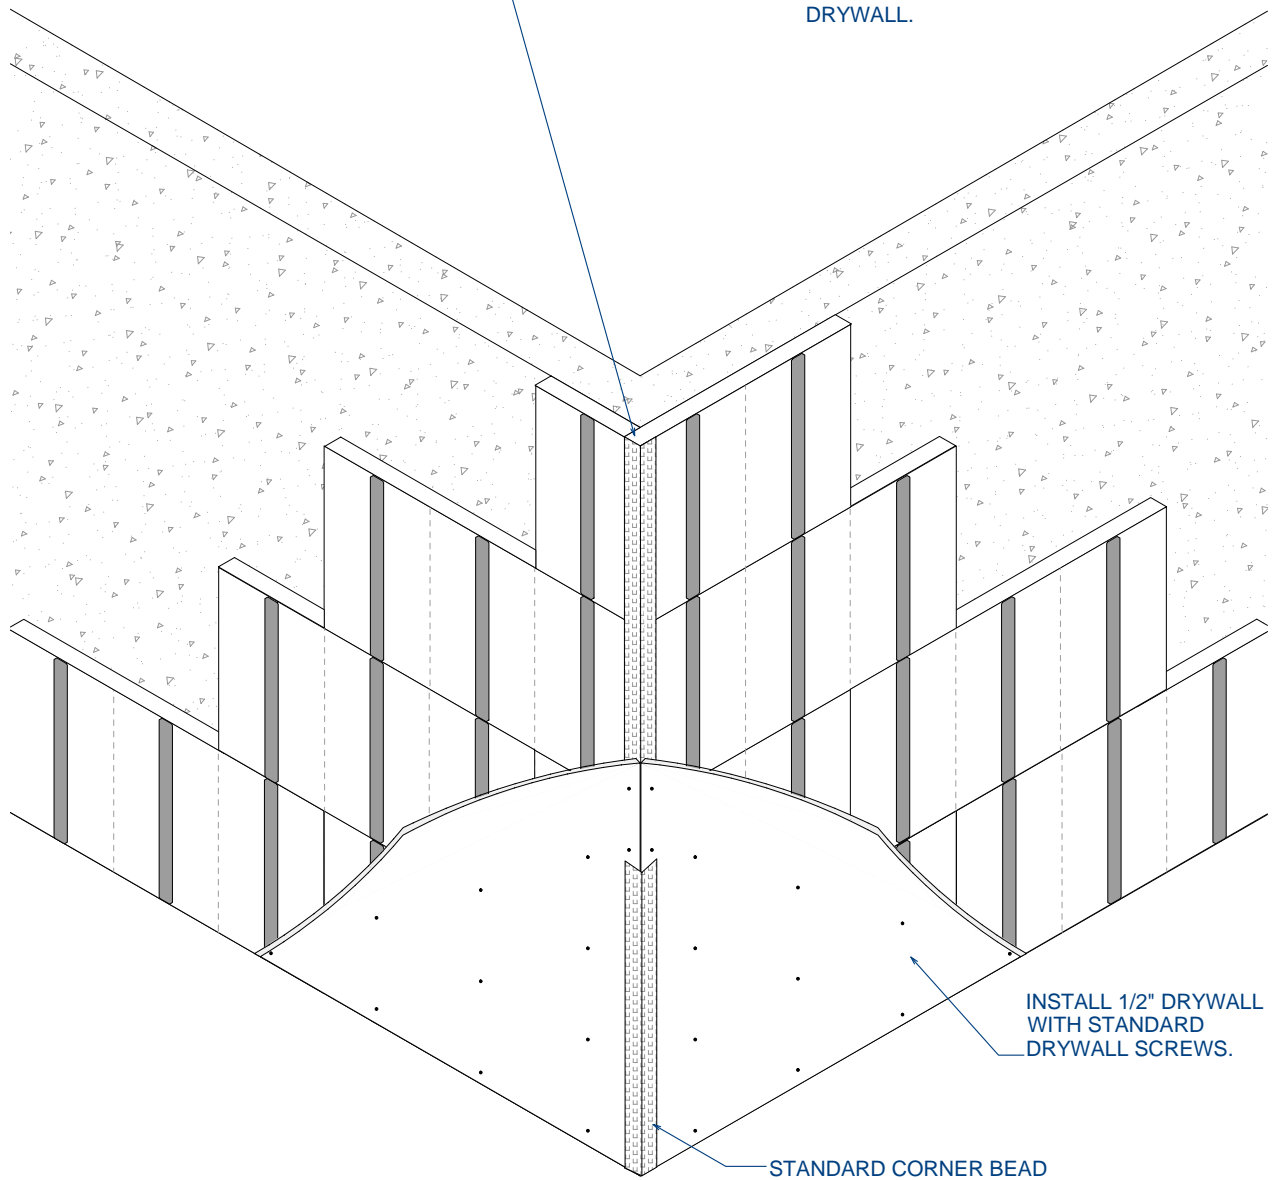

INSTALL 1/2" DRYWALL WITH STANDARD DRYWALL SCREWS.

STANDARD CORNER BEAD

DUE TO VARIANCES IN LOCAL CODES, CONSTRUCTION PRACTICES, AND REQUIREMENTS, ALL DETAILS SHALL BE CONSTRUCTED IN ACCORDANCE WITH SUCH LOCAL CODES, CONSTRUCTION PRACTICES, AND REQUIREMENTS REGARDLESS OF DETAIL CONSTRUCTION SHOWN IN THIS DRAWING, INSOFAST, LLC MAKES NO WARRANTY, EXPRESSED OR IMPLIED. INSOFAST, LLC ASSUMES NO LEGAL LIABILITY OR RESPONSIBILITY FOR THE ACCURACY, COMPLETENESS, OR USEFULNESS OR ANY INFORMATION APPARATUS, PRODUCT OR PROCESS DISCLOSED.



Corner Bead Detail for Drywall

888-501-7899

InSoFast, LLC

www.InSoFast.com

Scale: NOT TO SCALE

Date: March 2010

Detail #: **ISF 09.01**